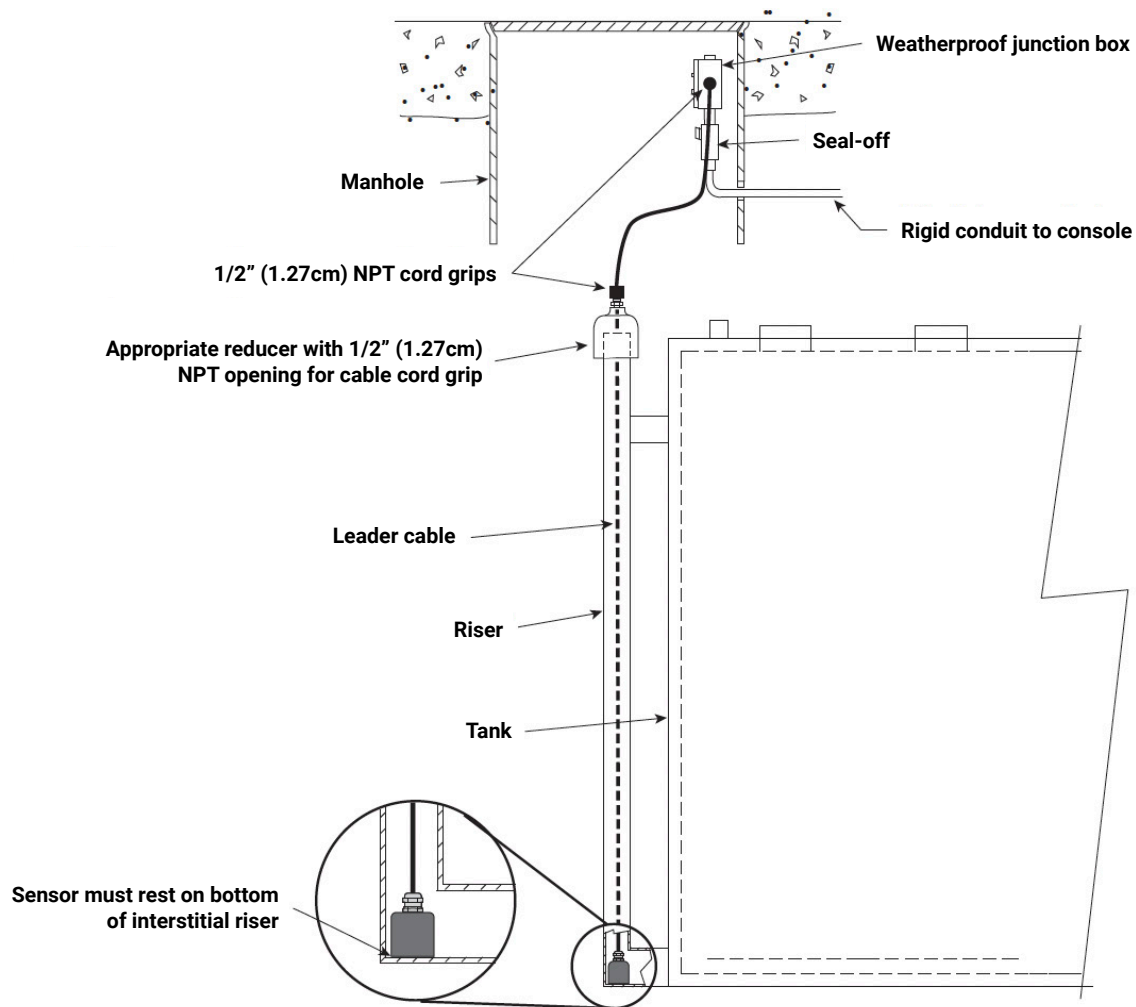| Sensor Description	Interstitial Sensor for Steel Tanks	The Interstitial Sensor for Steel Tanks is non-discriminating and detects the presence of liquid between the double walls of the tank.

Part Number	0794390-420 (16'/4.88m cable); 0794390-460 (30'/9.14m cable)

Category	☐ Discriminating ☐ Level Sensing ☑ Non-Discriminating ☐ Static Testing ☐ Position Sensitive ☐ Hydrostatic

Fuel Compatibility	☑ Gas ☑ E-15 ☑ Green Diesel ☑ Diesel ☐ E-85[1] ☐ DEF ☑ Kerosene ☐ E-100 ☑ Waste Oil ☑ Jet Fuel ☑ Bio-Diesel 20 ☑ Motor Oil ☑ Aviation Gas ☐ Bio-Diesel 100

Console Compatibility	Recommended Min. Console Software	Sensor Interface Modules				
		Module Part #	Module Description	# of Modules per Console	# of Sensor Inputs per Module	Availability
TLS-450PLUS (8600 Series)	6.A or Higher	0332812-001	Universal Sensor Module (USM)	Up to 4 – TLS-4xx Up to 8 – TLS-4xx w/ opt. TLS-XB	16	Sold Separately
TLS-450	4.A or Higher					
TLS4 (8601 Series)	6.A or Higher	0330020-750	Universal Sensor Input/Output Module (USIOM-AC)	1	12	Included
TLS4i (8601 Series)						
TLS4B (8601 Series)		0330020-751			6	
TLS4c (8601 Series)						
TLS-350/R/PLUS	124/324 or Higher	0329358-001	Interstitial Sensor Interface Module	Up to 8	8	Sold Separately
TLS-350J		0329356-003	4 Probe / 4 Sensor Interface Module	1	4	Sold Separately
TLS-300i		0330230-001	4 Probe / 8 Sensor Interface Module		8	Included

Alarm Notification	Normal	Sensor in Normal State – No liquid detected
	Fuel Alarm	Liquid detected
	Sensor Out	Sensor not communicating to ATG/Console

Installation Kit	0312020-928	2" (50mm) Interstitial Sensor Riser Cap and Adaptor Kit (Sold Separately)

Specifications	
Operating Principle	Reed Switch / Float
Product Activation Height	1.4" (3.56cm)
Operating Temperature	-4°F to +140°F (-20°C to +60°C)
Dimensions	2.5" (6.4cm) high, 1.5" (3.8cm) diameter
Miscellaneous/Notes	0794380-420 (cable 16' (4.9m)); 0794380-460 (cable 30' (9.1m)); 0312020-928 (2" (50mm) Riser Cap and Adapter Kit)
Third Party Evaluation Links	TLS-3XX/TLS-450 Series Consoles TLS4 (8601 Series) Consoles
Product Link	Interstitial Sensor for Steel Tanks
Warranty with System	1 Year Parts & Labor
Warranty (When purchased separately)	1 Year Parts Only

Where Used (Typical)	☐ Dispenser Pan	☑ Annular Space
	☐ Spill Containment	☐ Monitoring Well
	☐ STP Sump	☐ Oil/Water Separator Tank
	☑ Convault Tank	

Example Installation

Weatherproof junction box

Seal-off

Manhole

Rigid conduit to console

1/2" (1.27cm) NPT cord grips

Appropriate reducer with 1/2" (1.27cm) NPT opening for cable cord grip

Leader cable

Riser

Tank

Sensor must rest on bottom of interstitial riser

Notice

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.

Veeder-Root reserves the right to change system options or features, or the information contained in this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be photocopied, reproduced, or translated to another language without the prior written consent of Veeder-Root.

Example Illustrations

Illustrations used in this guide for example sensor installations may contain components that are customer supplied and not included with the sensor. Please check with your Veeder-Root Distributor for recommended installation accessories.

Third Party Evaluations

Third party evaluations of the Veeder-Root sensors contained in this application guide can be found under the Veeder-Root vendor name on the National Work Group on Leak Detection Evaluations (NWGLDE) website: http://www.nwglde.org